




How to change the remote control unit (RCU) model for your receiver.

WARNING!! THIS HAS THE POTENTIAL TO LEAVE YOU LOCKED OUT OF YOUR RECEIVER UNLESS YOU HAVE ANOTHER MODEL OF RECEIVERS RCU TO UNDO THE CHANGES, OR COMPLETLEY REFLASH TO START AGAIN!!

Using The 4D image for the Technomate Linux OE range of receivers, Twin, 2T, Single & Nano, its possible to use an RCU from another model. You may need to use this sort of system if you have 2 identical receivers in the same room, and want to control them independently of each other, by changing the remote of one of them.

To change the remote in use, press **MENU** Scroll down to INFORMATION and press **OK**, Scroll down to ABOUT and press **OK**, now, using the coloured buttons on your remote, press **BLUE RED BLUE** and the following menu will appear

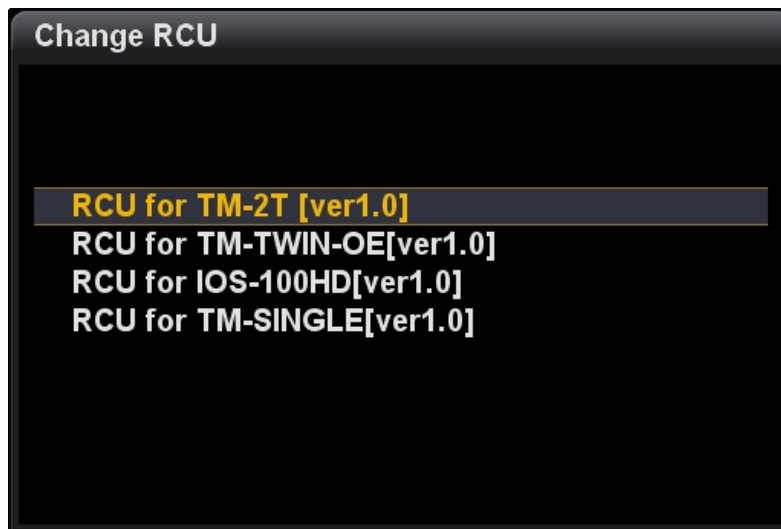

On this menu, use UP and DOWN on the remotes directional pad to highlight the remote you want to use, and press OK, and >> will appear next to your choice of remote, and that's it changed. The option 'IOS-100HD' is the TM-NANO-OE.

Enjoy



digidude

www.technomatessoftware.co.uk